



# Quick Installation Manual

- When the ambient temperature is not higher than 45 °C, the inverter can achieve the best operating state.
- Installation height is preferably parallel to the line of sight for ease of operation and maintenance.
- Inverters should be installed away from flammable and explosive items and ensure that there is no strong electromagnetic interference equipment around them
- The parameters labels and warning signs of the inverter must be clearly visible after installation
- Avoid sun, rain and snow when installing inverters

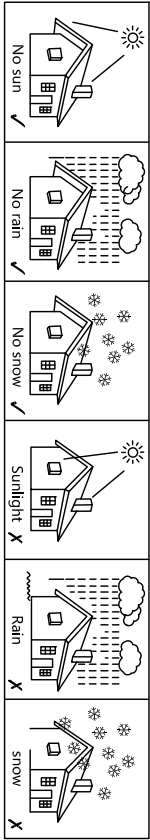


## step 1

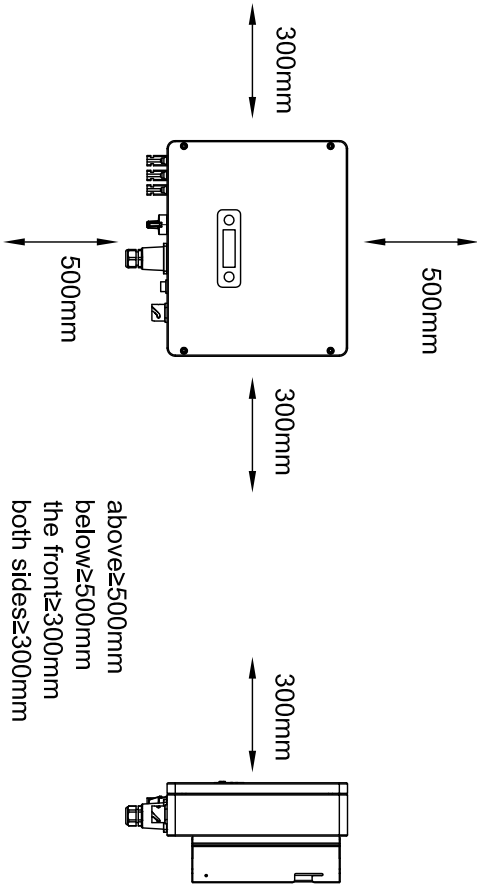


## Installation spacing

If the machine is installed indoors, it can greatly extend the service life of the machine.


## step 2

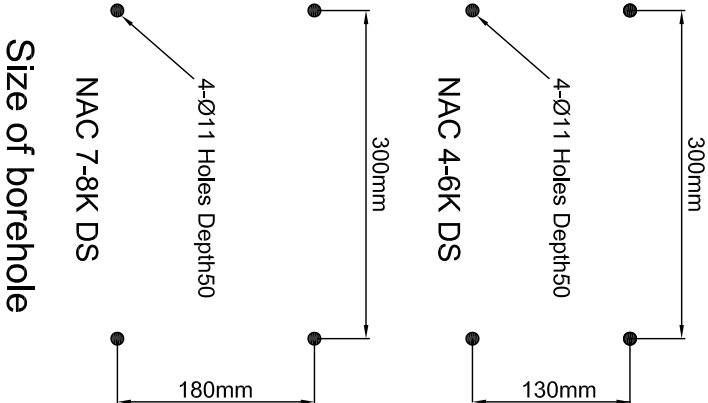


## step 3

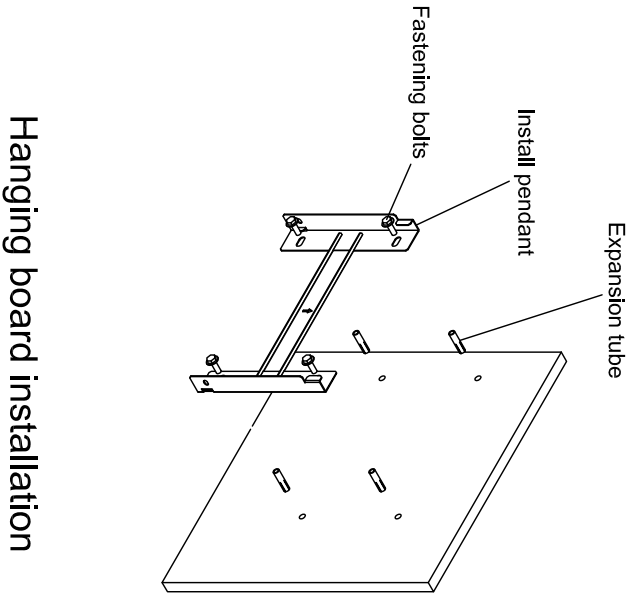

## step 4

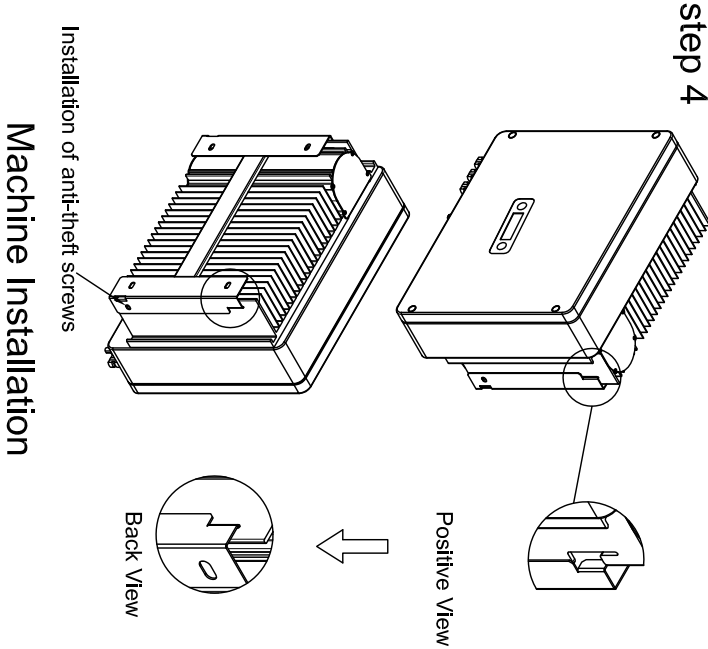


step 5

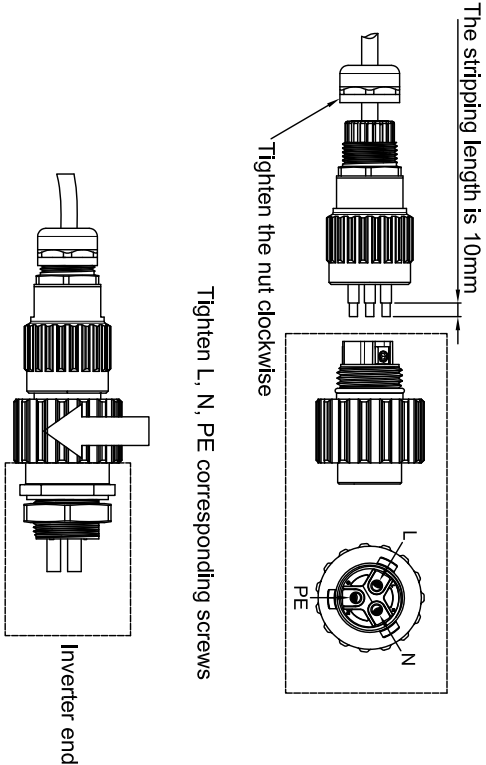


AC wiring and assembly

step 7

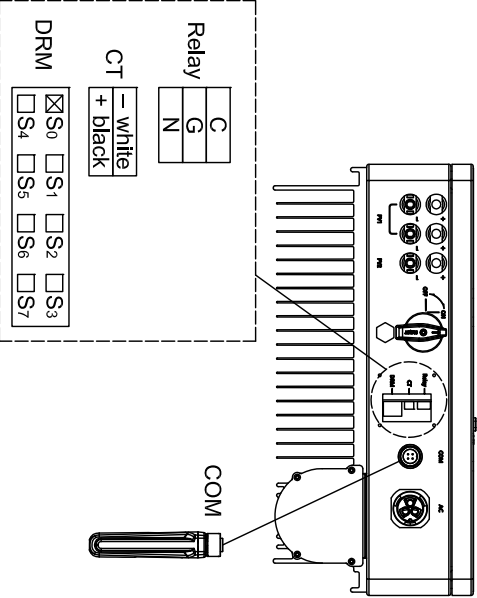


Installation of a rod data collector<Optional>

step 6

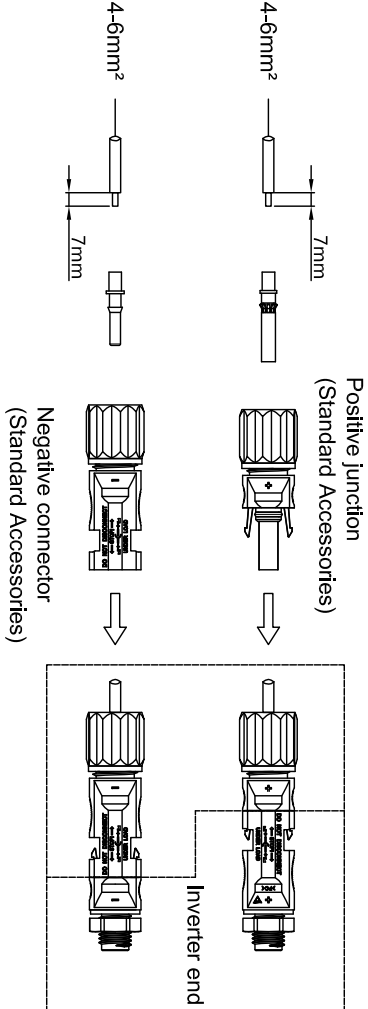

DC wiring and assembly

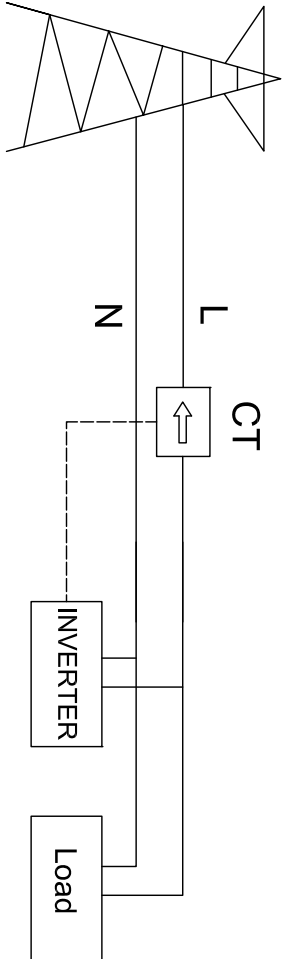

CT Installation Diagram