
R3 Note Series



User Manual

R3-4K-DT

R3-5K-DT

R3-6K-DT

R3-8K-DT

R3-10K-DT

R3-12K-DT

R3-15K-DT

RENAC

Content

1. Introduction	2
1.1 Introduction	2
1.2 Applied designations	2
1.3 Important safety information	3
1.4 System sizing	3
2. Technical description of inverters	4
2.1 Mechanical design	4
2.2 Electrical system design	5
2.3 Technical data	5
2.4 Grid codes	6
3. Installation and startup	8
3.1 Package information	8
3.2 Installation environment	8
3.3 Installation position	9
3.4 Mounting procedure	10
3.5 Electrical connection	11
3.6 Starting the Inverter	15
4. User Interface	15
4.1 Led and key	15
4.2 LCD display	16
4.3 Factory setting	16
4.4 Setting language	17
4.5 Setting modbus address	17
4.6 Self-Test in accordance with CEI 0-21 (Applies to Italy only)	17
5. Warranty	19
5.1 Warranty claim procedure	19
5.2 Service after warranty expiration	20
Appendix A: FAQ (Frequently asked questions)	20

1. Introduction

1.1 Introduction










This manual describes solar inverters :
R3-4K-DT/R3-5K-DT /R3-6K-DT/R3-8K-DT/R3-10K-DT/R3-12K-DT/R3-15K-DT.

These inverters are transformerless based inverter.

Please read the safety instructions in this manual first. Throughout the manual it is assumed that the reader is familiar with AC and DC installations and knows the rules and regulations for electrical equipment and for connecting it to the utility AC grid. It is especially important to be familiar with the general safety rules for working with electrical equipment.


1.2 Applied designations

Throughout the manual important information is shown at different levels depending on the character of the information, as shown here:

	Safety information important for human safety. Violation of warnings may result in injury to persons or death.
	Danger of high voltage and electric shock!
	Signals danger due to electrical shock and indicates the time (5 minutes) to allow after the inverter has been turned off and disconnected to ensure safety in any installation operation.
	Danger of hot surface!
	Product should not be disposed as normal household waste.
	CE Mark
	ROHS Mark
	Information important for the protection of property. Violation of this type of information may cause damage and loss of property.
	Useful additional information or “Tips and Tricks” on specific subjects.

1.3 Important safety information

Read this before installing, operating or maintaining the inverter.



Before installation:

Check for damage to inverter and packaging. If you are in doubt, please contact your supplier before installing the inverter. Check the voltages of the solar modules and make sure they are within the limits of the inverter specifications before connecting them to the inverter.

Installation:

Only trained and authorized personnel familiar with local electrical codes may install the inverter. For optimum safety, please follow the steps described in this manual. Keep in mind that the inverter has two voltage carrying sides, the PV input and the AC grid.

Disconnecting the inverter:

Always disconnect the AC line first! Afterwards disconnect the PV lines. Note that the inverter can still be charged with very high voltages at hazardous levels even when it is disconnected from grid and solar modules. Wait at least 5 min. before proceeding, after having disconnected from grid and PV panels.

Operating the inverter:

Before connecting the AC grid to the inverter, make sure that the installation cover is mounted again. The inverter must not be open during operation.


Maintenance and modification:

Only authorized personnel are allowed to repair or modify the inverter. To ensure optimum safety for user and environment, only the original spare parts available from your supplier should be used.

Functional safety parameters:

Unauthorized changes of functional safety parameters may cause injury or accidents to people or inverter. Additionally it will lead to the cancelling of all inverter operating approval certificates.

1.4 System sizing



When dimensioning a photovoltaic system, it must be ensured that the open circuit voltage of the PV string never exceeds the maximum permissible input voltage of 600V DC. The PV string open circuit voltage during parallel string operation is 550V. Higher voltages may result in permanent damage to the inverter.



Protection							
DC Insulation Monitoring	Integrated						
Input Reverse Polarity Protection	Integrated						
Anti-island Protection	Integrated						
Residual Current Monitoring	Integrated						
Over-heat Protection	Integrated						
AC Overcurrent Protection	Integrated						
AC Short-circuit Protection	Integrated						
AC Overvoltage Protection	Integrated						
DC Surge Protection	Integrated (Type III)						
AC Surge Protection	Integrated (Type III)						
General Data							
Size(Width*Height*Depth)	395 x 330 x 185mm		455x390x160mm			455x390x190mm	
Weight	16.3KG	16.3KG	16.3KG	18.3KG	18.3KG	18.3KG	21.6KG
User Interface	LCD						
Communication	RS485 (Standard), Wifi or GPRS						
Ambient Temperature Range	-25 ℃ ~ 60 ℃						
Relative Humidity	0-100%						
Operating Altitude	≤ 4000m						
Standby Self Consumption	< 0.2W						
Topology	Transformerless						
Cooling	Natural Convection						
Protection Grades	IP65						
Noise	< 30dB						
Warranty	5 / 7 / 10 years						
Certifications & Standards							
Grid Regulation	C10/11, PEA, MEA, G98, G99, EN50549,CEI 0-21, CEI 0-16, IEC61727, IEC62116, IEC60068, IEC61683						
Safety Regulation	IEC 62109-1, IEC 62109-2						
EMC	EN 61000-3-2, EN 61000-3-3, EN 61000-3-11, EN 61000-3-12, EN 61000-6-2, EN 61000-6-3, IEC 61000-4-16, IEC 61000-4-18, 4-29						

2.4 Grid codes


No.	National/Regional Grid Code	Description
0	VDE4105-DE	Germany power Grid, meet Grid standards “VDE-AR-N-4105”.
1	CEI0-21	Italy power Grid.
2	AS4777	Australia power Grid.
3	RD1699	Spain power Grid.
4	EN50549	Default EN50549 Grid setting.
5	EN50549-DK-W	West Denmark power Grid.
6	Greece	Greece power Grid.
7	EN50549-NL	Netherland power Grid, meet Grid standards “EN50438”.
8	C10/11	Belgium power Grid.
9	G99	UK power Grid.
10	China	China power Grid, meet Grid standards “CN-NBT”.
11	VDE0126-FR	France power Grid, meet Grid standards “VDE 0126”.
12	EN50549-PL	Poland power Grid.
13	Brazil-180s	Brazil power Grid ,connect/reconnect time 180s
14	VDE0126-DE	Germany power Grid, meet Grid standards “VDE 0126”.
15	CEI0-16	Italy power Grid, meet Grid standards “CEI 0-16”.
16	G98	UK power Grid.
17	Greece Island	Greece Island power Grid.
18	EN50549-CZ	Czech Republic power Grid, meet Grid standards “EN50438Y2007-CZ”.
19	IEC61727-IN	India power Grid.
20	Korea	Korea power Grid.
21	EN50549-SW	Sweden power Grid.
22	China-W	China power Grid, Grid voltage range： 160-290V
23	China-H	Grid frequency range： 47-53HZ.
24	IEC61727-IN-W	China power Grid, meet standards“CQC”.
25	Brazil	India power Grid, meet Grid standards “IEC61727”.

No.	National/Regional Grid Code	Description
26	IEC61727-SL	Sri Lanka power Grid, meet Grid standards "IEC61727".
27	Mexico	Mexico power Grid, meet Grid standards "IEC61727 60HZ".
28	NZ4777	New Zealand power Grid, meet Grid standards "NZ4777".
29	Philippines	Philippines power Grid, meet Grid standards "IEC61727 60HZ spec".
30	IEC61727-SL-W	Sri Lanka power Grid, Grid voltage range: 160-280V, Grid frequency range: 47-52HZ.
31	PEA	Thailand power Grid.
32	PEA-W	Thailand power Grid, Grid voltage range: 160-280V, Grid frequency range: 47-52HZ.
33	IEC61627-VN	Vietnam power Grid.
34	IEC61627-VN-W	Vietnam power Grid, Grid voltage range: 160-280V, Grid frequency range: 47-52HZ.
35	Tunisia	Tunisia
36	MEA	Thailand power Grid.
37	MEA-W	Thailand power Grid, Grid voltage range: 160-280V, Grid frequency range: 47-52HZ.
38	Brazil-LV	120V 60Hz voltage of grid L to N(R3-10-15K-LV only,others reserved
39	EN50549-DK-E	East Denmark power Grid
40	Tunisia-W	Tunisia wide range
41	Chile	Chile Power Grid
42	Brazil-W	Brazil power Grid , meet Grid standards "NBT 16150".
43	EN50549-PL-W	Poland power Grid.
44	Brazil-180s-W	Brazil power Grid , meet Grid standards "NBT 16150".
45	UNE217002-ES	Spain power Grid.
46	G98-NI	G98 for Northern Ireland
47	G99-NI	G99 for Northern Ireland
48	EN50549-NW	Norway-400VLine
49	EN50549-NW-LV	Norway-230VLine-R3-10-15K-LV only,others reserved
50	IEC61727-LV	133V 50Hz, low voltage power grid

3. Installation and startup

	Warning ! Before installation and maintenance, AC and DC side doesn't carry electricity, but if DC side is just disconnected, capacitance still contains electricity, so please wait for at least 5 minutes to ensure the capacitors completely release the energy and inverter is not electrified.
	Note ! Inverters must be installed by qualified person.

3.1 Package information

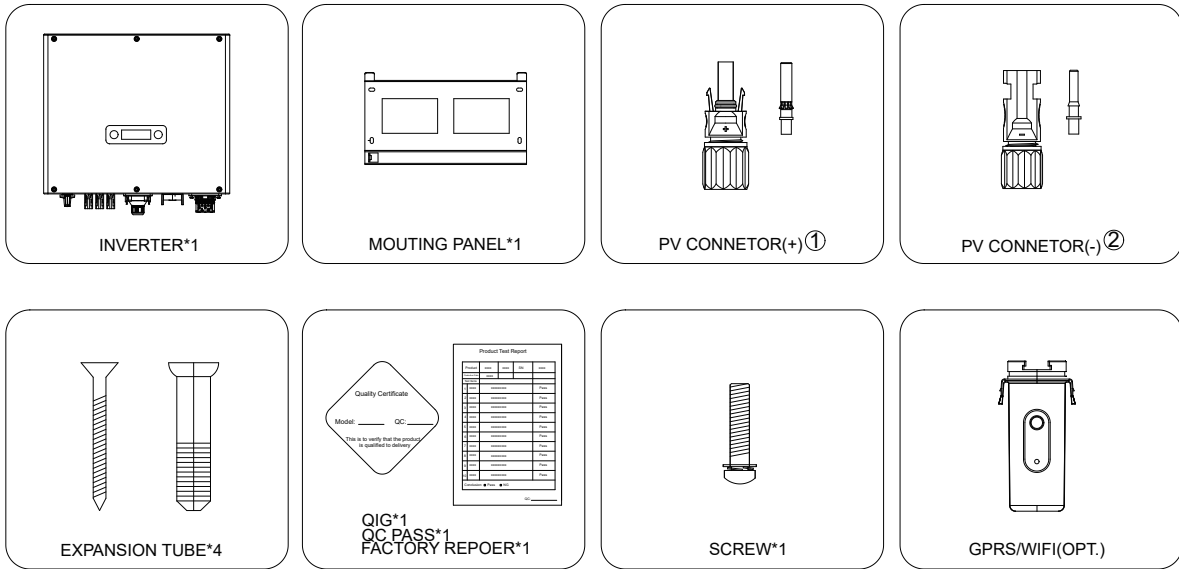

①. There are 2 PV connectors for R3-4/5/6/8/10/12K-DT and 3 PV connectors for R3-15K-DT
②. There are 2 PV connectors for R3-4/5/6/8/10/12K-DT and 3 PV connectors for R3-15K-DT

Figure 3-1 package information

3.2 Installation environment

- 1) In order to achieve optimal performance, the ambient temperature should be kept lower than 45 °C.
- 2) For the convenience of checking the LCD display and possible maintenance activities, please install the inverter at eye level.
- 3) Inverters should NOT be installed near inflammable or explosive items. Any strong electro-magnetic equipment should be kept away from installation site.
- 4) Product label and warning symbol shall be clear to read after installation.
- 5) Please do not install inverter under direct sunlight, rain and snow.

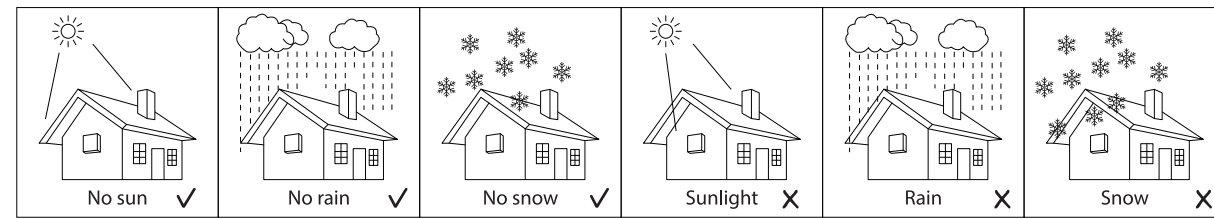


Figure 3-2 installation environment

3.3 Installation position



- 1) The installation method and mounting location must be suitable for the inverter's weight and dimensions.
- 2) Mount on a solid surface.
- 3) Select a well-ventilated place sheltered from direct sun radiation.

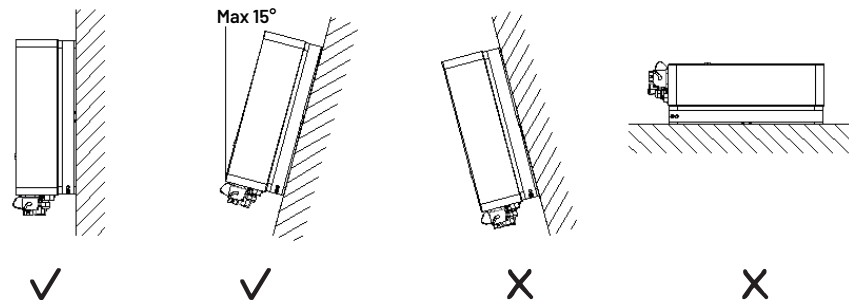


Figure 3-2 installation position

In consideration of heat dissipation and convenient dismantlement, the minimum clearances around the inverter should be no less than the following value.

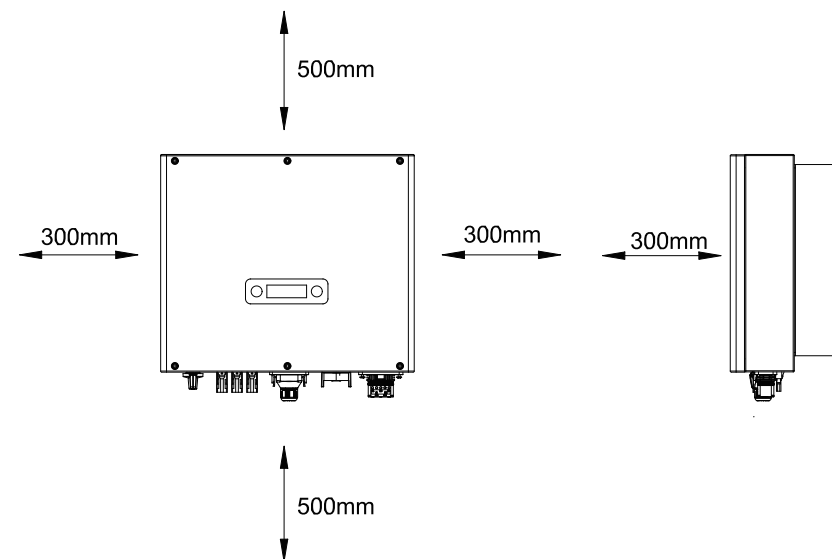


Figure 3-3 Distance required of Invertors

3.4 Mounting procedure

Step1: Drill 4 Fix Ø11 holes in the wall according to the dimensions.

Step2: Fix the wall mounting bracket on the wall with 4 expansion bolts in accessory bag.

Step4: Place the inverter on the wall-mounted bracket and install the fix screw.



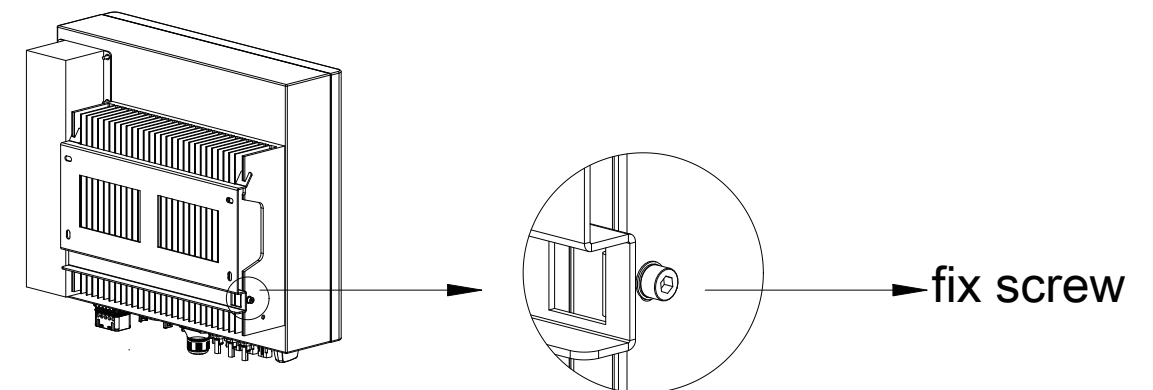


Figure 3-4 mounting the inverter

3.5 Electrical connection


3.5.1 Connection to the grid (AC output)

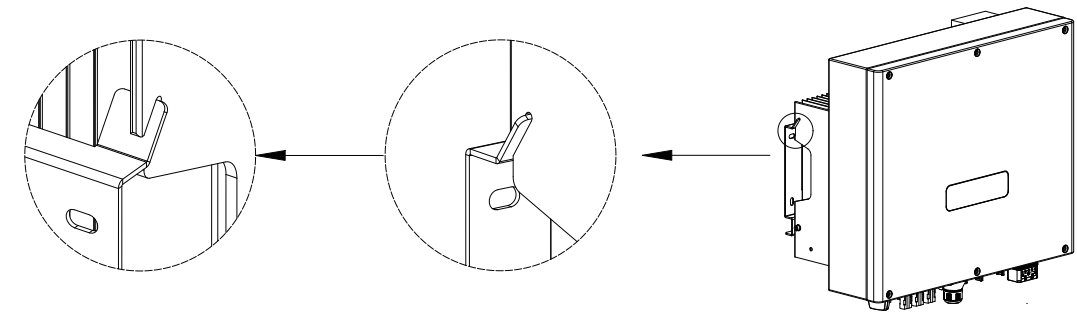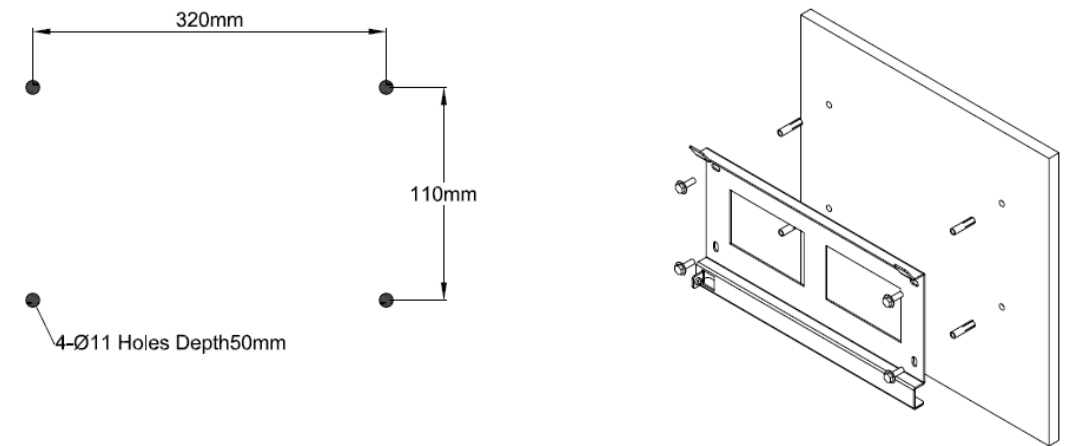

- 1) Add breaker or fuse to AC side, the specification should be more than 1.25 times of rated AC output current.
- 2) The PE line of inverter should be connected to the earth, make sure the impedance of neutral wire and earth wire less than 10 ohm.
- 3) Disconnect the breaker or fuse between the inverter and the utility.
- 4) All inverters incorporate a certified internal Residual Current Device (RCD) in order to protect against possible electrocution and fire hazard in case of a malfunction in the PV array, cables or inverter. There are 2 trip thresholds for the RCD as required for certification (IEC 62109-2:2011). The default value for electrocution protection is 30mA, and for slow rising current is 300mA.

Connect the inverter to the grid as follows:


1)Strip off N/L1/L2/L3 cables as figure 3-5:

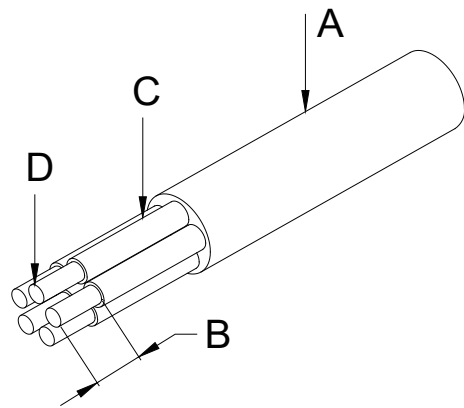


No.	Description	Remark
A	Protective layer	Diameter ranges : 15-25mm
B	Length of stripped off	12mm
C	Insulate layer	50mm
D	Cross section of ac cables	6-10mm ²

Figure 3-5 Strip off N/L1/L2/L3 cables


2) Strip off PE cable as figure 3-6:

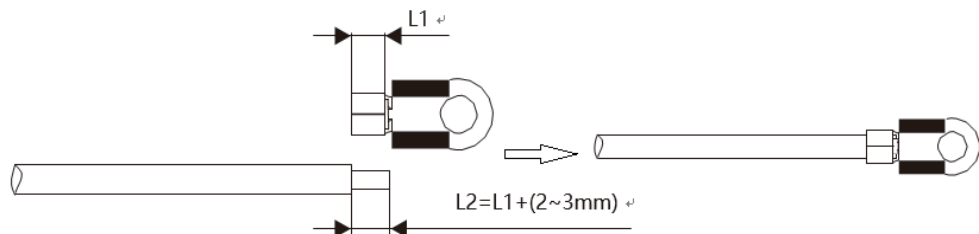


3) Pass the crimped AC wire into the AC connector.

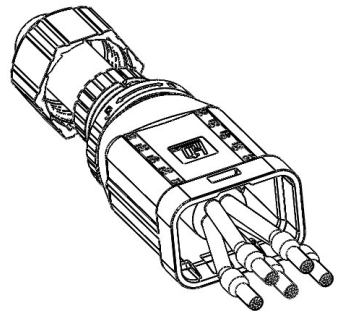


5) The cables are inserted into the terminal according to the wire sequence (L1/L2/L3/N/PE), so that the insulating terminal is flush with the surface of the terminal, and the crimping screw torque is 2.0±0.1N•m.

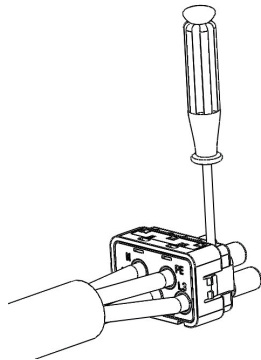


6) Insert the main part of AC connector into the terminal and hear a "click" sound.

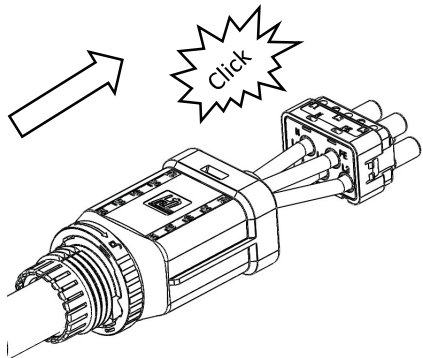


7) Use a wrench to tighten the nut, and there is a "click" sound.

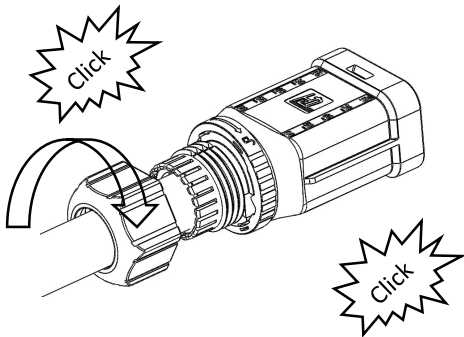

8) Insert the female end of the wire into the male end of the inverter and hear a "click".

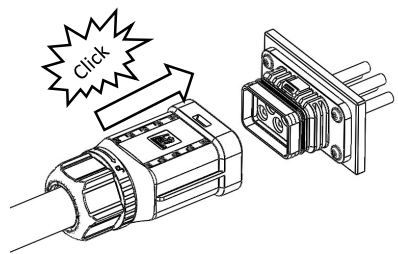


9) Complete the installation.

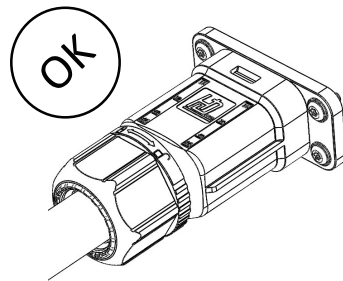


Disassembly the inverter from the Grid:


1) Use a screwdriver to press against the unlocked position and hold the wire nut and pull it back to complete the separation of the male and female ends.

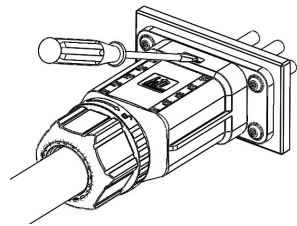


2) The female end connector is separated from the inverter end connector.

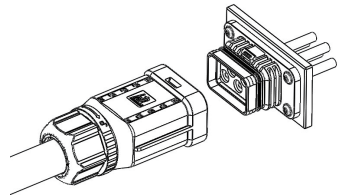

3) Hold the unlocking buckle with one hand and rotate it in the direction of the mark, and turn the nut in the opposite direction.

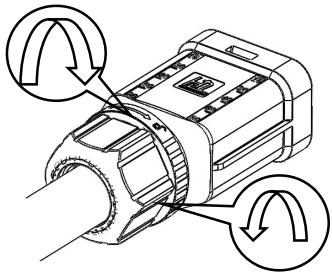

4) Use a screwdriver to peel off the positions (both sides) indicated by the red circle to complete the disassembly.

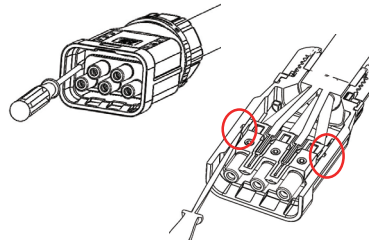


4) Screw waterproof coupling and Screw cap nut tightly onto the cable.


3.5.2 Connection to PV string (DC input)



- 1) Before connecting PV string, make sure DC switch is turned off.
- 2) Make sure PV string polarity confirms with DC connector, otherwise, it will cause damage to inverter.
- 3) Make sure the maximum open circuit voltage (Voc) of each PV string does not exceed the inverter input voltage Vmax under any condition.
- 4) Do not connect positive or negative pole of PV string to earth wire. Otherwise, it will cause damage to inverter.

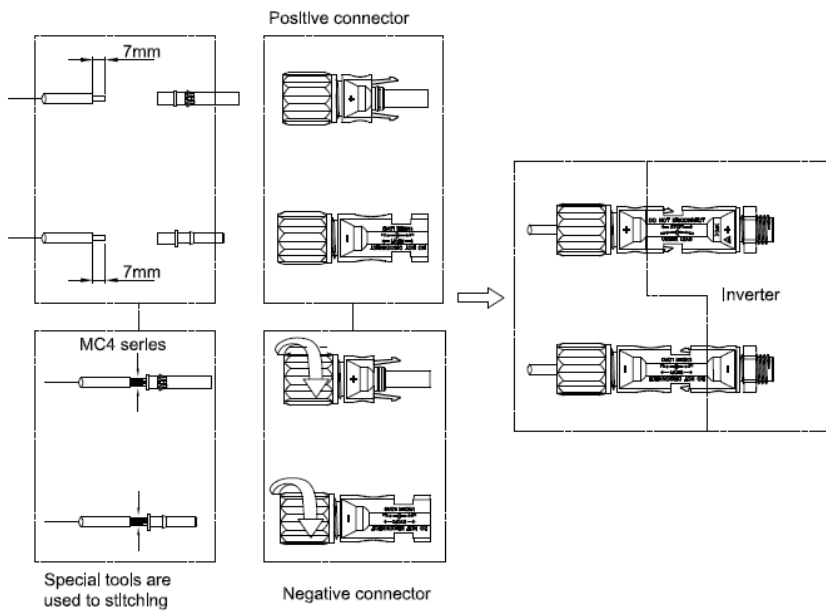

- 1) Please make sure the RS485 connecting cables not exceed 1000m.
- 2) Communication lines must be separated from other power lines to avoid communications interference.

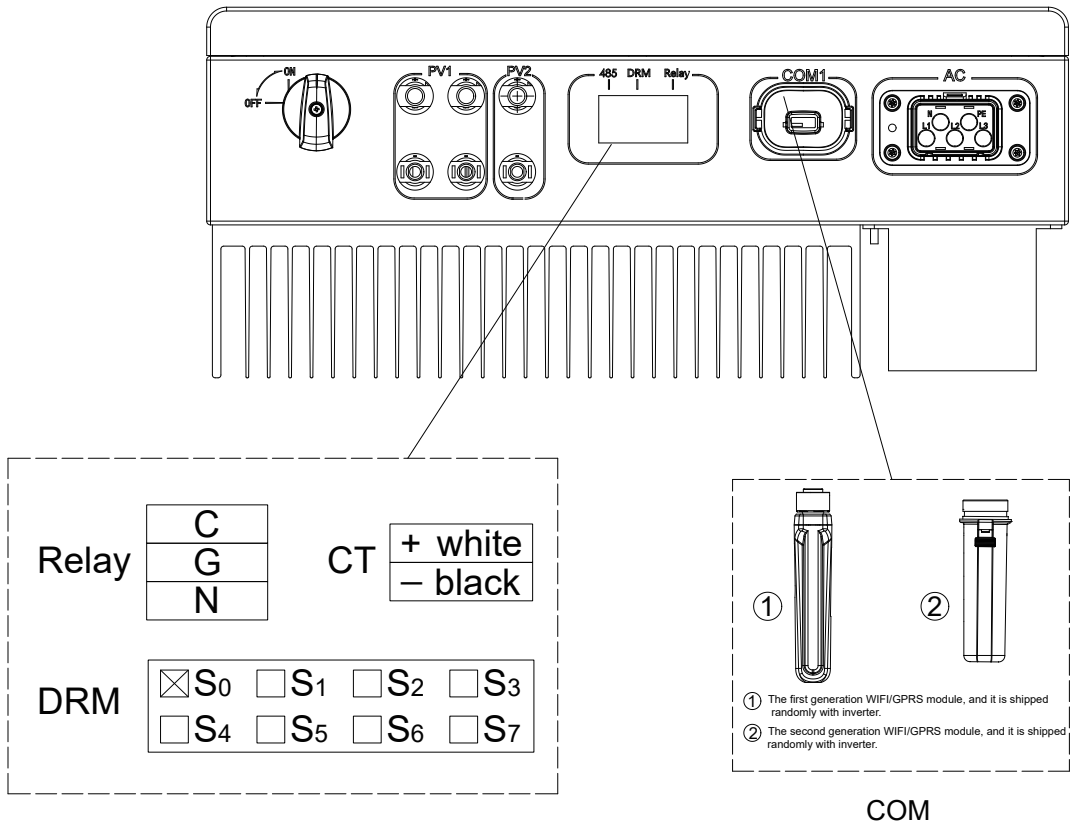

- 1) For CEI standard, DRM S0 is the DI port, corresponding to PIN5 (GND), PIN6 (DI input port) of RJ45.
- 2) COM port, PIN3:A, PIN4:B.

Figure 3-9 Communication Port

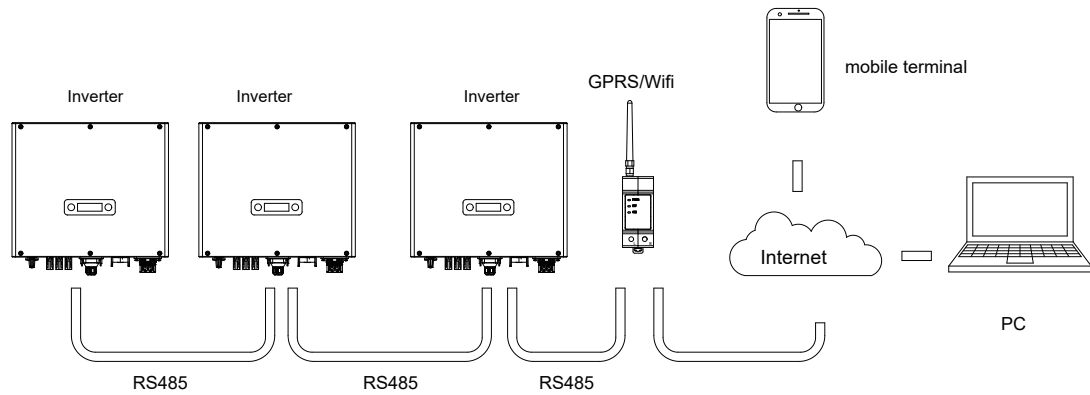


Figure 3-10 RS485 in multiple series

Please refer to the module user manual in detail.

3.6 Starting the inverter

Before turn on the inverter, please confirm:

- 1) Three phase five wires (PE/L1/L2/L3/N) cable correctly connected to the inverter AC side through AC circuit breaker;
- 2) The DC cable connected correctly to the inverter DC side through DC circuit breaker, please be attention to the cable connected to the two string correctly and it's polarity;
- 3) The unused terminals are covered.

Starting the inverter:

- 1) Close the DC and AC circuit breaker;
- 2) If the solar panels provide enough energy, the power module will work and the LCD panel will be lit;
- 3) In case you are starting the inverter for the first time, the inverter needs to be commissioned. Commissioning is described on page 17,chapter 4.3.
- 4) Then the inverter will turn into self-check mode and the LCD panel will display the remaining time of connect simultaneously;
- 5) After the inverter turn into normal mode, it feed electrical energy into grid, and LCD panel will display the generated electrical energy.

As long as the inverter works, it will automatically track the maximum power point to absorb the maximum energy from solar. When night comes, the irradiance is not strong enough to provide energy, the inverter will power off automatically. When the next day comes, the input voltage reaches the start value, it will start again automatically.

4. User interface

4.1 Led and key


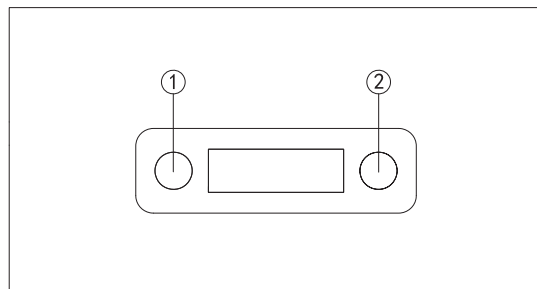


Figure 4-1 LED display

No.	Object	Description
1	Run (Green LED)	On = Normal operation
		Flashing = Waiting, checking or starting up
1	Fault (Red LED)	On = Failure
		Flashing = Temporary failure
2	Pushbutton	Pressing < 1 s: Next
		Pressing > 2 s: Enter

4.2 LCD display

Menu structure:

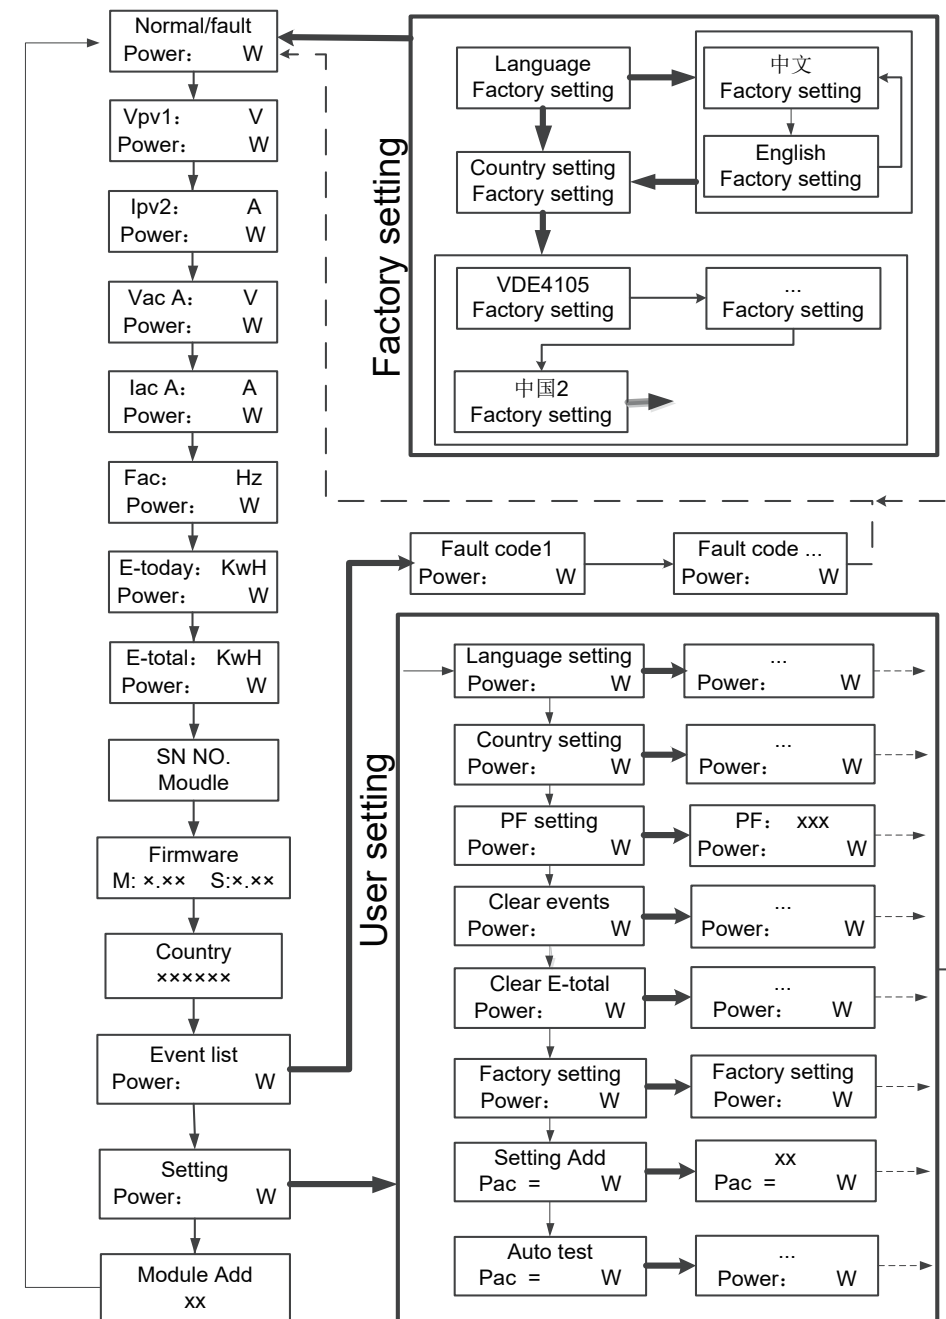

→ Press the button less than 1 second

→ long Press the button

-----> Return

4.3 Factory setting

- 1) Press pushbutton long in order to enter the "Factory setting" menu.
- 2) Press pushbutton long to enter the "language setting" menu.
- 3) Press pushbutton less than 1 sec. to the langue menu you want and Press pushbutton long to select.
- 4) Press pushbutton less than 1 sec. to the country menu you want and Press pushbutton long to select.

4.4 Setting language

- 1) Press pushbutton less than 1 sec. several times until you reach the “Setting” menu.
- 2) Press pushbutton long in order to enter the “setting” menu.
- 3) Press pushbutton less than 1 sec. several times until you reach the “language setting” menu.
- 4) Press pushbutton less than 1 sec. to the langue menu you want and Press pushbutton long to select.

4.5 Setting modbus address

- 1) Press pushbutton less than 1 sec. several times until you reach the “Setting” menu.
- 2) Press pushbutton long in order to enter the “setting” menu.
- 3) Press pushbutton less than 1 sec. several times until you reach the “module add” menu.
- 4) Press pushbutton less than 1 sec. to the modbus address number you want and Press pushbutton long to set.

4.6 Self-Test in accordance with CEI 0-21 (Applies to Italy only)

The self-test is only required for inverters, which are commissioned in Italy. The Italian standard requires that all inverters feeding into the utility grid are equipped with a self-test function in accordance with CEI 0-21. During the self-test, the inverter will consecutively check the protection reaction times and values for overvoltage, under voltage, over frequency and under frequency.

Self-test function is available at any time. It also allows end user get test reports shown on LCD display.

There are two ways to execute the self-test:

Auto-Test from screen:

- 1) Press pushbutton less than 1 sec. several times until you reach the “Setting” menu.
- 2) Press pushbutton long in order to enter the “setting” menu.
- 3) Press pushbutton less than 1 sec. several times until you reach the “AutoTest-Italy” menu (You need to set the inverter country to CEI 0-21 before testing).

SafetyCountry	Auto Test-Italy
CEI 0-21	Pac= 10000W

- 4) Press pushbutton long to execute the auto-test.
- 5) The inverter will automatically run the test until the screen shows “Test end”, if the test passes, it will show “test ok”, if the test is failed, it will show “test failed”.

59.S1 testing 253.0V/243.9V	59.S1 Test ok 223.3V/1993ms
59.S2 testing 264.5V/232.6V	59.S2 Test ok 223.8V/187ms
27.S1 testing 195.5V/213.0V	27.S1 Test ok 223.5V/1485ms
27.S2 testing 34.5V/38.8V	27.S2 Test ok 230.2V/186ms
81 > .S1 testing 50.20Hz/49.88Hz	81 > .S1 Test ok 49.98Hz/95ms
81 < .S1 testing 49.80Hz/49.88Hz	81 < .S1 Test ok 50.03Hz/88ms
81 > .S2 testing 51.50Hz/51.39Hz	81 > .S2 Test ok 50.04Hz/93ms
81 < .S2 testing 47.50Hz/48.01Hz	81 < .S2 Test ok 50.01Hz/91ms

Auto-Test from Solar Admin:

- 1) Download and install “Solar Admin” on laptop.
- 2) Connect inverter to laptop via RS485 port.
- 3) When the inverter and “solar admin” are successfully connected. Click “Sys.setting” - “Other” - “AUTOTEST” enter into “Auto-Test” interface.
- 4) Click “Execute” to start the test.
- 5) The inverter will automatically run the test until the screen shows “Test end”.
- 6) Click "Read" to read the test value, and click "Export" to export the test report.
- 7) After click “Read” button, interface will show the test results, if the test passes, it will show “PASS”, if the test is failed, it will show “FAIL”.

Solar Admin

Inverter

8101031190402005

Number of devices: 1

COM

ON

COM1

Overview

History info

Sys.setting

Protection

Active Power

Reactive Power

other

Reset(factory set)

LVRT settings

Grid over vol. derating

Extension Settings

Basic data settings

Update(1~3.7K-SS)

Update(4~8K-DS)

Update(4~15K-DT)

Update(10~33K-DT)

CEI

AUTOTEST

Italy Autotest

Execute test

U > (59.S1)

Threshold Value

Reading

Vmax

253.0

224.0

Trip

2000

1987

Pass

U >> (59.S2)

Threshold Value

Reading

Vmax

264.5

230.5

Trip

200

199

Pass

U < (27.S1)

Threshold Value

Reading

Vmin

195.5

230.2

Trip

1500

1486

Pass

U << (27.S2)

Threshold Value

Reading

Vmin

34.5

225.0

Trip

200

186

Pass

F > (81.S1)

Threshold Value

Reading

Fmax

50.2

50.01

Trip

100

92

Pass

F < (81.S1)

Threshold Value

Reading

Fmin

49.8

49.94

Trip

100

92

Pass

F >> (81.S2)

Threshold Value

Reading

Fmax

51.5

51.02

Trip

100

98

Pass

F << (81.S2)

Threshold Value

Reading

Fmin

47.50

50.03

Trip

100

89

Pass

Read

Export

5. Warranty

The standard warranty period for the inverter is 60 months from the date of installation and no more than 66 months (5.5 years) from the date of shipment from factory.

5.1 Warranty claim procedure

Please report defective device with a brief error description and SN code to our service mail or service hotline for registration.

Alternatively, please contact your specific dealer or installer if your unit is defective or faulty.

To claim the warranty under the warranty terms of factory, you need to supply us with the following information and documentation regarding the faulty unit:

- 1) Product Model No (e.g. R1-8K-DS) and the serial Number (e.g. 8700831201211006).
- 2) Copy of the invoice and warranty certificate for the inverter.
- 3) Error message on LCD screen and additional information regarding the fault/error.
- 4) Detailed information about the entire system (modules, circuits, etc.).
- 5) Documentation of previous claim/exchanges (if applicable).

In the case of an exchange, the remainder of the warranty entitlement will be transferred to the replacement device. In this event, you will not receive a new certificate, as this replacement will be noted by factory.

R3 Note Series User Manual

21

5.2 Service after warranty expiration

For products which are out of warranty, factory charges an on-site service fee, parts, labor cost and logistic fee to end-user which can be any/all of:

- 1) On-site attendance fee: Cost of travel and time for the technician in attending on-site;
- 2) Parts: Cost of replacement parts (including any shipping/admin fee that may apply);
- 3) Labor: Labor time fee charged for the technician, who is repairing, maintaining, and installing (hardware or software) and debugging the faulty product;
- 4) Logistic fee: Cost of delivery, tariff and other derived expense when defective products are sent from user to factory or / and repaired products are sent from factory to user;

Appendix A: FAQ (Frequently asked questions)

Sometimes, the PV system does not work normally; we recommend the following solutions for average troubleshooting. This can help the technician to understand the problem and take a proper action.

Fault	LCD display	Possible actions
Clearable Fault	Isolation Fault Isolation Fault 2	1. Check whether the inverter is earthed and test impedance between PV (+) & (-) and the impedance must exceed 3MΩ; 2. Check whether the AC-side has contacts with earth.
	Grid Faults: Fault OVR Fault UVR Fault OFR Fault UFR	1. Wait for 5 minutes, if the grid returns to normal, PV inverter automatically restarts. 2. Make sure grid voltage and frequency meet the local specifications.
	No Utility	1. Grid is not connected. 2. Check grid connection cables. 3. Check grid usability. 4. If grid is ok and the problem exists still, maybe the fuse in the inverter is open, please call service.
	OverTemp	1. The internal temperature of inverter is higher than specified normal value. 2. Find a way to reduce the ambient temperature.Or move the inverter to a cooler environment.
	PV0VFault PV20VFault	1. Check the open PV DC voltage, and see if it is greater than or too close to 950VDC 2. If PV DC voltage is less than 950VDC, and the problem still occurs, please call local service.

Fault	LCD display	Remark
Permanent Fault	Consistent Faults: Consist VGrid Consist Freq Consist GFCl Consist DCI	1. Disconnect all PV (+) or PV (-) from solar panels 2. Wait for a few seconds. 3. After the LCD switches off, reconnect and check again. 4. If the problem remains, please call local service.
	RelayFail	
	BusUnbalance	
	IacUnbalance	
	EEPROM_W Fail	
	EEPROM_R Fail	
	IpvUnbalance	
	GFClFault	
	AuxPowerFault	
	DCI out range	
	OCPV	
	OCPV2	
	OCIGrid	
	SciCommLose	
	SpiCommLose	
	BusFault	
	CPU ADFault	
	IGridDevice	
	PLLFault	
	AutoTestFail	
	PVConfigFault	
	FanError	

SMART ENERGY FOR BETTER LIFE



RENAC POWER TECHNOLOGY CO., LTD.

Add: Block 6, No.2, West Jinzhi Road, Suzhou National Hi-Tech District, Suzhou, China
Tel : +86-0512-66677278
info@renacpower.com
www.renacpower.com